

JUMPSHOT BI-POLAR PROM SUBSTITUTIONS LIST

In your "Pac-Pack" Game Conversion Kit, eight (8) IC's (which are programmed for the game "Jumpshot") are included. Six of these IC chips are eproms whose Main Game Logic Board locations are printed on each chip's label. However, The other two IC chips (which are bi-polars) MAY or MAY NOT have P.C.B. locations printed on labels. To avoid confusing the locations of the bi-polar chips, the following list provides all of their substitute (actual) part numbers:

BP-PROM (Position "4A" on Main Game Logic Board)

Common Part Number: 0E18-00803-0009

Substitute Part Numbers:	E18A-35AAL-AXGD	(BP-PROM: 6301-1)
	E18A-27AXN-AXHD	(BP-PROM: 82S129)
	E18A-15AAA-AXPD	(BP-PROM: 7611A-5)
	E18A-78AXV-AX4D	(BP-PROM: 7114E)
	E18A-36AAA-AXGD	(BP-PROM: 63S141)

BP-PROM (Position "7F" on Main Game Logic Board)

Common Part Number: 0E18-00803-0010

Substitute Part Numbers:	E18A-17AXN-BXGD	(BP-PROM: 6331-1)
	E18A-07AXN-BXHD	(BP-PROM: 82S123)
	E18A-03AXN-BXPD	(BP-PROM: 7603-5)
	E18A-77AXV-BX4D	(BP-PROM: 7112E)
	E18A-79AAJ-BXGD	(BP-PROM: 63S081)

JUMP SHOT

OPTION SWITCH SETTINGS

GAME TIME

5 MINUTES TOTAL GAME TIME
4 MINUTES TOTAL GAME TIME
2 MINUTES TOTAL GAME TIME
3 MINUTES TOTAL GAME TIME

SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7	SW#8
ON	ON						
OFF	ON						
ON	OFF						
*OFF	OFF						

PLAYER SELECTION

PLAYER 1 BLACK
 WHITE
PLAYER 2 BLACK
 WHITE

ON
*OFF

ON
*OFF

METHOD OF PLAY

FREE PLAY
NORMAL PLAY

ON
*OFF

1 PLAYER PER 1 CREDIT
1 OR 2 PLAYERS PER 1 CREDIT

ON
*OFF

ATTRACT MODE SOUNDS

ATTRACT SOUNDS - ON
ATTRACT SOUNDS - OFF

ON ON
*OFF OFF

* INDICATES FACTORY RECOMMENDED SETTINGS

PART NO. M051-00E18-A007